

ONESONIC

MXS-HD1




User Guide

Packing List

1 x MXS-HD1 Earbuds.
1 x USB Type C Cable.
1 x Charging Case.
S, M & L Silicon Eartips
1 x User Guide.

Warranty

In cases where any defects occur within 12 months from the date of purchase, ONESONIC or their service partners will replace the unit with a fully operational unit of the same type, or will provide a repair service after inspection without charge for labour or parts. This excludes any artificial damage. The earbuds and packaging must be kept intact and free of scratches.

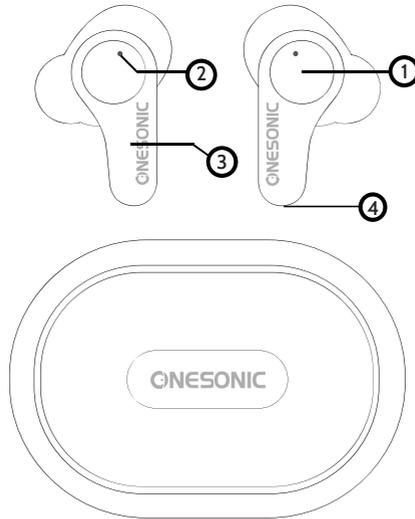

Product Functions

1. Touch Control
2. Noise Cancelling Microphone
3. LED Indicator Light
4. Voice Microphone

LED Indicator (Earbuds)

Low Battery	A voice prompt alerts you that the battery level is low. LED Indicator flashes white every three seconds.
Charging Mode	When charging, the LED Indicator is solid WHITE. The LED Indicator turns OFF when fully charged.
Bluetooth Pairing Mode	The LED Indicator of the earbuds flashes white and blue alternately.
Bluetooth Connected	The LED Indicator of the earbuds flashes blue slowly.

LED Indicator (Charging Case)

Charging Mode (when plugged in)	
LED is flashing Red	Charging
LED is solid White	100% Charged
Case Battery Status (upon opening or closing lid, or pressing Status Button)	
LED is solid White for 5s	50% to 100% Charge
LED is solid Red for 5s	25% to 50% Charge
LED is flashing Red for 5s	Below 25% Charge

Product Specifications

Product Name	ONESONIC MXS-HD1
Compatible Operating Systems	Android/iOS
Chipset	BES2300ZP
Bluetooth Version	BT5.0 with support for HFP1.7, A2DP1.3, AVRCP1.6, SPP1.2
Li-Battery Capability	Earbud: 40mAh Charging Case: 500mAh
Operating Time	5-6 Hours
Charging Time	1 Hour (Earbuds) 1 Hour (Charging Case)
Charging Mode	USB Type C 5V - 430mA Fast Charge Enabled
Bluetooth Transmission Range	≤10m
Speaker Impedance	32 Ohms ± 15% @ 1kHz
Speaker Sensitivity (SPL)	104dB ± 2.7dB @ 1kHz
Ambient Noise Cancelling	23 - 25dB

Pairing Procedure

Ensure Bluetooth is switched on and activated on the device you wish to pair with. Remove the earbuds from the charging case. They are automatically powered on when removed. A voice prompt alerts you that power is on and the LED Indicators flash blue and white. Alternatively, the earbuds can be turned on manually by touching and holding the right and left Touch Control panels. A voice prompt alerts you that power is turned on. The LED Indicators flash blue and white.

Ensure Bluetooth is activated on the device you wish to pair with. Open the Bluetooth devices list on your device and select 'ONESONIC MXS-HD1'. Click connect to start pairing procedure. If necessary, enter the default pin code, '0000'. A voice prompt alerts you upon a successful connection. Once connected, the blue LED Indicator will flash slowly.

Note: auto power on/off does not work when the charging case is out of power. Earbuds will turn off if they do not find a Bluetooth device after 5 minutes.

Resetting Your Earbuds

To reset/re-connect the left and right earbud: Ensure earbuds are fully charged. Open the case and Press and Hold the reset button for approx. 10seconds. Release the button when the LED on both earbuds shows a continuous BLUE and WHITE light for approx. 1second.

NOTE: It is recommended to refresh the list of bluetooth paired devices on your audio source, or Unpair/Forget the 'ONESONIC MXS-HD1' prior to repairing.

Charging Procedure

A voice prompt alerts you that the battery level is low. The earbuds turn off automatically when power runs out. Insert the earbuds into the charging case. Close the lid and the earbuds recharge automatically. If the LED Indicator on the charging case flashes RED, it needs to be charged. To charge the charging case, plug the USB-C cable into the charging port of the charging case and connect the other end of the USB-C cable to a USB power source. Alternatively, the charging case can be charged wirelessly via a wireless charging platform. The LED indicator light on the charging case will flash RED when charging, and will change to solid WHITE when fully charged.

Operating Instructions

Power On (Auto)	Automatic power on once removed from charging case.
Power On (Manual)	Press and hold Touch Control for 2 seconds.
Power Off	Auto power off when inserted into charging case and closed, or within 5 minutes of no bluetooth connection.
Single Tap (Left)	Decrease Volume
Single Tap (Right)	Increase Volume
Double Tap (Left or Right)	Answer/End Call
Double Tap (Left or Right)	Play/Pause
Triple Tap (Left)	Previous Track
Triple Tap (Right)	Next Track
Hold (2 secs) Left or Right	Reject Call
Hold (2 secs) Left	Turn on Voice Assist (Siri/Google)
Hold (2 secs) Right	Switch between; <ul style="list-style-type: none">• ANC ON - "Dum" down• Ambient Sound - "Swish" up• ANC OFF - "Dum" up

Safety Information

Do not use the earbuds at a high volume for extended periods as hearing loss may occur. Check the volume of the earbuds on your paired device before playing any audio.

Do not use the earbuds while driving or operating heavy machinery. The use of earbuds while operating a vehicle may be illegal in some areas. Check and obey the applicable laws and regulations regarding the use of earbuds while operating a vehicle. Stop listening to your audio device if you find it distracting while driving or operating any type of vehicle.

Do not use this device if you find it disruptive to any activity that requires your full attention to ensure personal safety.

Do not use the earbuds while walking in dangerous areas where full hearing capability is required for personal safety. Example areas include but are not limited to: construction sites, while crossing the road, at railway intersections etc.

The earbuds and accessories may present a choking hazard or cause other injury to small children and infants. Ensure that these devices are stored carefully in an area away from small children.

With regular usage, earbuds may lead to ear infections or skin irritation. Clean the earbuds regularly using a soft, lint-free cloth. Do not get moisture in any of the openings or clean the product using aerosols, solvents or abrasives. If skin irritation occurs, discontinue use. If the problem persists, seek help from a qualified medical professional.

